

## Installation Instructions

### everroll®

Page 1 of 1

<b>1. Subsurface</b>	The subsurface does not require a special initial treatment. It should be, however, conventionally prepared, i.e. scraped off, plane and flat.
<b>2. Installation</b>	When rolling up elastic floor coverings tensions in the material can occur. Thus allow the unrolled rolls to sit in place for a few hours to adjust room temperature before cutting each roll to the exact length. It is recommended to cut <b>everroll®</b> with a normal carpet cutter. Lay out <b>everroll®</b> on the floor and make sure that each roll is unrolled in the same direction, i.e. always start at the same wall.
<b>2.1 Loose installation</b>	<p>Depending on the intended application, <b>everroll®</b> can also be laid loosely thus allowing to remove the flooring for replacement at a later date. In individual cases please contact the manufacturer for adjustment.</p> <p>Installation of the rolls is carried out flush. Due to the structured surface joints are almost invisible.</p>
<b>2.2 Adhesion</b>	<b>everroll®</b> can be adhered to the floor with a suitable dispersion or PUR adhesive (e. g. Henkel, Uzin, Forbo, Schönox, Bostik, Ibola, Kiesel, etc. Please pay attention to the manufacturers' processing recommendations). Installation of the rolls is carried out flush as well. Seam welding is not necessary. Weight down the joints and edges if required (especially when using a PUR adhesive).

BSW reserves the right to change and/or modify these specifications without further notice.

Version 062010  
Printed: 28/06/2010